

# Pedal Stabilizer

## PS-300

The PS-300 Anchor helps to prevent the Secondary pedal of your Demon Drive P-3002D Double Pedal from slipping. To get optimum performance, please read this Instruction Manual before installing.

- 1) Detach the screws from the PS-300 using the provided Allen wrench and remove the protection tubes from the spikes.
- 2) Place the PS-300 in the left and right groove of the pedal plate as shown with the spikes facing toward the front of the pedal.

**CAUTION:**

Make sure that footboard doesn't hit the SP-300 when it's fully depressed.

- 3) Reattach the screws to the PS-300 using the Allen wrench from the underside of the pedal plate. Adjust the length of the spikes to achieve the desired slip resistance by turning the knobs as shown.

**CAUTION:**

The Spikes are sharp and can cause bodily damage or property damage. To prevent mishaps, use with extra care. Rugs or mats should be used to protect floor surfaces.

