


PEARL DRUM PEDAL

P-800CX

Instruction Manual

Congratulations on your purchase!
To get optimum performance of your "P-800CX" Drum Pedal,
please read this Instruction Manual before playing use.

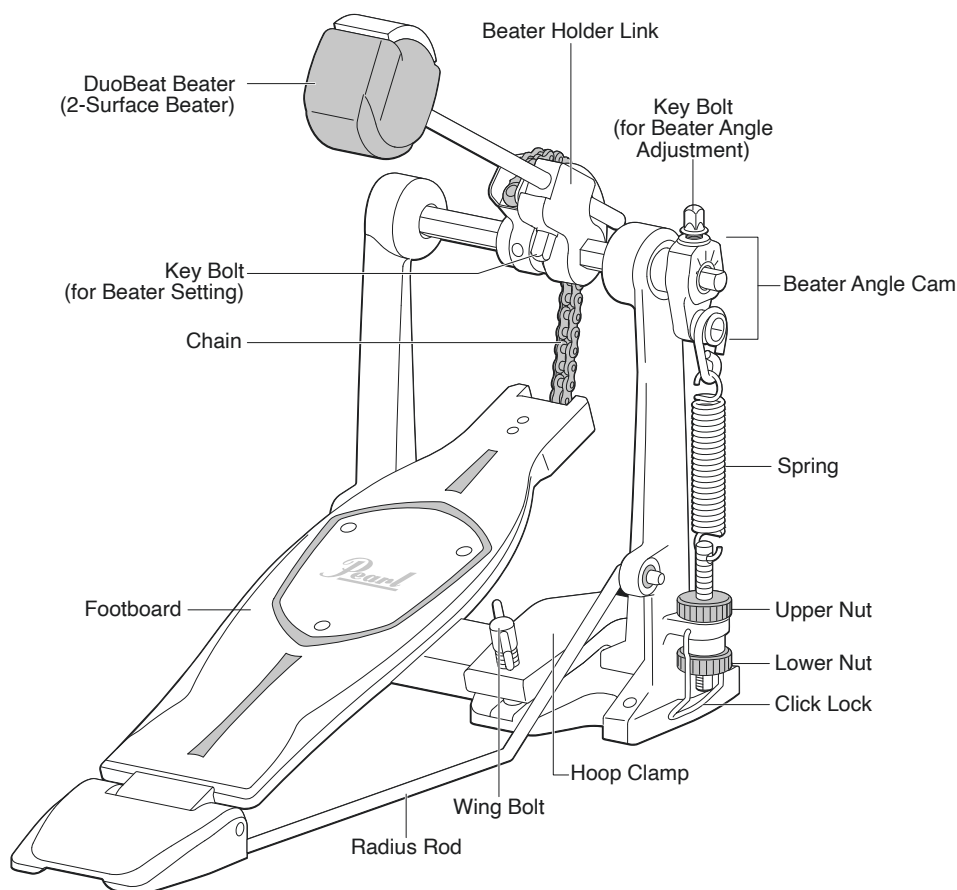

DuoBeat Beater (2-Surface Beater)

The DuoBeat Beater features a Felt Surface (A) for a full, warm sound and a Plastic Surface (B) for a sharper, punchier sound. Use the side that best suits your playing style (Fig.1).

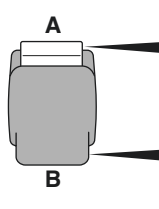
	Surface Material	Felt Surface
	Sound	Full, Warm Sound
	Surface Material	Plastic Surface
	Sound	Sharper, Punchier Sound

Fig.1

Beater Setting

Insert the shaft of the DuoBeat Beater into the Beater Holder Link and tighten the Key Bolt with the provided Tuning Key to secure the Beater at the desired height. Experiment with different Beater heights to find the best combination of power and speed (Fig.2).

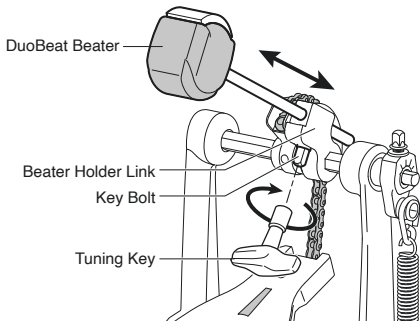


Fig.2

Beater Angle Adjustment

Depending on your preference, the Beater can be positioned closer or farther away from the Bass Drum Head. This is accomplished by loosening the Key Bolt on the Beater Angle Cam and swinging the Beater to the desired angle. Re-tighten the Key Bolt to secure the angle (Fig.3).

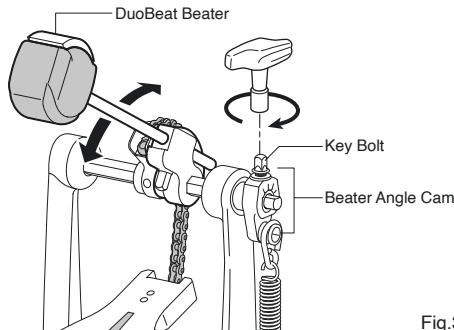


Fig.3

Spring Tension Adjustment

The P-800CX Pedal features our patented Click Lock spring tension retention system. To adjust the spring tension, disable the Click Lock by lifting the lever upward (Fig.3-B) and loosen the Upper Nut shown in (Fig.3-A). To increase spring tension, turn the Lower Nut clockwise. To decrease spring tension turn the Lower Nut counter-clockwise. Once desired spring tension is achieved, tighten the Upper Nut against pedal frame firmly. To secure the setting, lower the Click Lock lever to engage the grooves around the Lower Nut until you feel the lever "Click." Before playing, make sure that both Upper and Lower Nuts are tight and the Click Lock lever is in a vertical position with both sides of the lever engaged in the grooves around the Lower Nut (Fig.4).

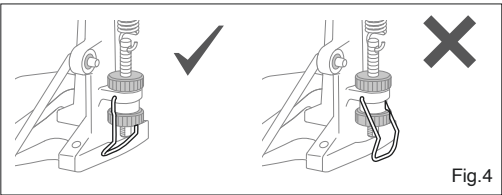
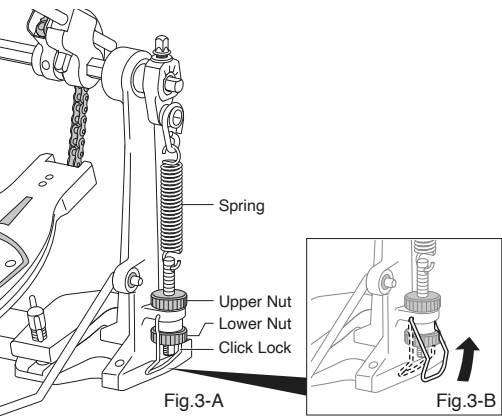


Fig.4

Hoop Clamp Wing Bolt

Place the Pedal on the Bass Drum Hoop and square the Pedal to the floor. Tighten the Wing Bolt to clamp the Pedal firmly in place (Fig.5).

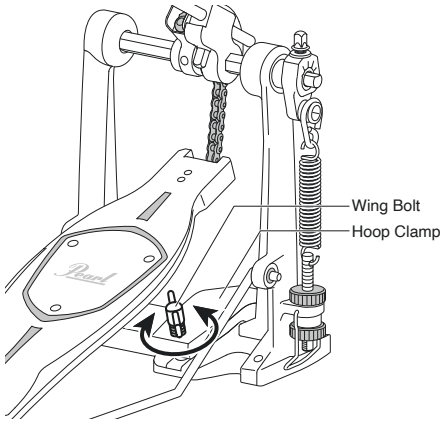


Fig.5

⚠ CAUTION

- ◆ Pearl Musical Instrument Company and Affiliates cannot be held responsible for personal injuries or property damage caused by the misuse, improper handling, failure to follow product warnings and instructions, or product use outside of its intended purpose.
- ◆ Periodically check all Allen Screws for tightness and tighten them with the provided hexagonal wrench as needed.
- ◆ Periodically apply lube to all moving parts such as the Chain, Cam Roller, Footboard Hinge, etc. for optimal speed and extended life of your pedal.
- ◆ Make sure to remove the Pedal when moving the Bass Drum to prevent damage to the Bass Drum and the Pedal.

California Proposition 65



Pearl[®]

<https://www.pearldrum.com>

Products and specifications are subject to change without notice.

Printed in China

-Apr 2026-