


PEARL

Jr. MARCHING BASS DRUM STAND

MJBS-1420

Instruction Manual

Congratulations on your purchase! To get optimum performance of your MJBS-1420 Junior Marching Series Bass Drum Stand, please read this Instruction Manual completely before attempting to assemble or use.

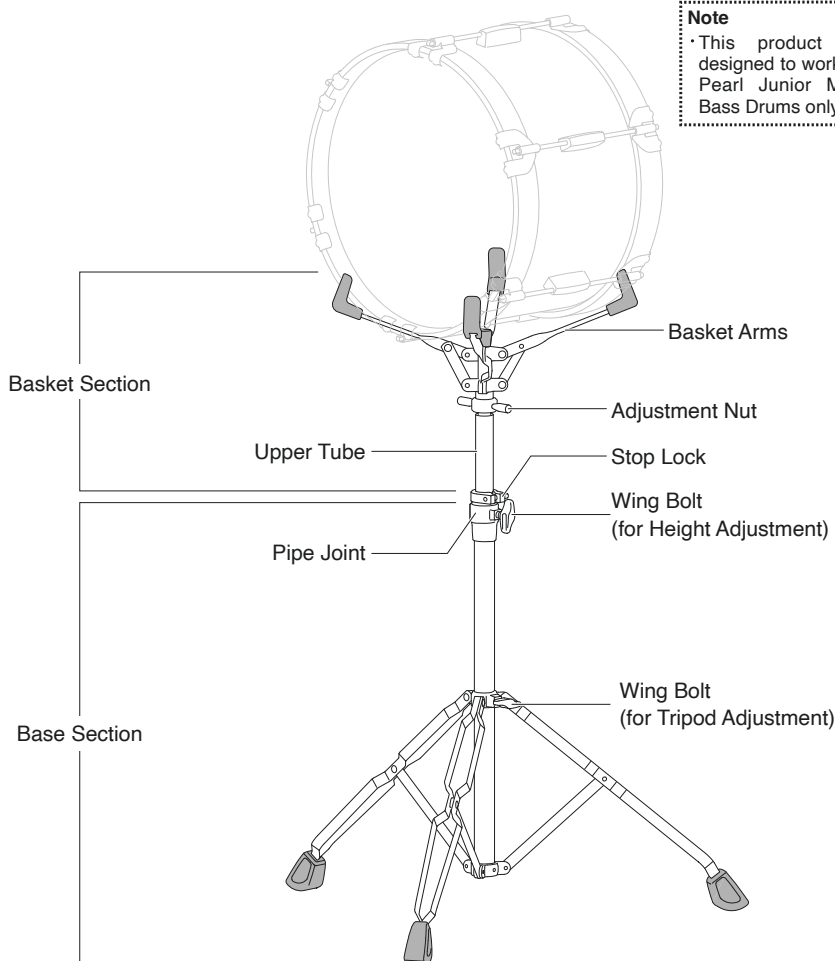

Base Section Assembly

Loosen the Wing Bolt for Tripod Adjustment and extend the legs to make it free-standing. For optimum stability, adjust the leg stance to a minimum of 26" (66cm). Tighten the Wing Bolt securely when set (Fig.1).

Top Section Assembly

Loosen the Wing Bolt for Height Adjustment located on the Pipe Joint of the Base Section. Insert the Upper Tube of the Basket Section as shown. Adjust the height to your preference then tighten the Wing Bolt to secure (Fig.1).

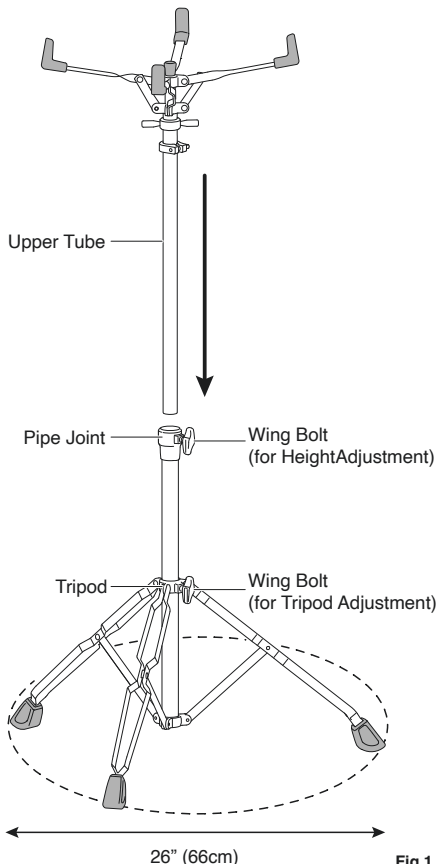


Fig.1

Stop Lock

The Stop Lock provides maximum security for the height adjustment by preventing any chance of slipping. In addition, it simultaneously provides the benefit of a memory setting for repeated setups.

To use, once the desired stand height is set, use the included Drum Key and loosen the Key Bolt of the Stop Lock and slide it down to the top of the Pipe Joint, then tighten the Key Bolt to secure the setting (Fig.2).

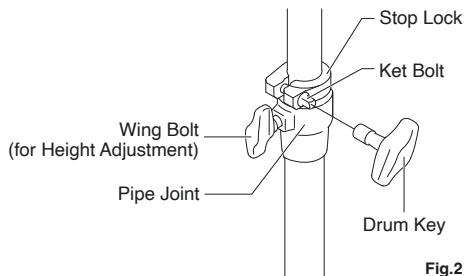


Fig.2

Note

For height adjustment, loosen the Wing Bolt on the Pipe Joint and the Key Bolt on the Stop Lock, and slide the Top Section. Tighten the Wing Bolt on the Pipe Joint and the Key Bolt on the Stop Lock when desired height is achieved.

Do NOT make height adjustment with the Bass Drum mounted on the stand.

Height Adjustment

- 1.Remove the Bass Drum from the stand.
- 2.Support the Basket Section of the stand with one hand and loosen the Key Bolt on the Stop Lock using the supplied Drum Key.
- 3.Loosen the Wing Bolt for Height Adjustment, and lower or raise the Basket Section to your desired height.
- 4.Tighten the Wing Bolt for Height Adjustment.
- 5.Move the Stop Lock to the top of the Pipe Joint and tighten the Key Bolt using the supplied Drum Key to secure it into place.
- 6.Check to ensure everything is tight before mounting the Bass Drum (Fig.2).

CAUTION

Always remove the Bass Drum to make any adjustments to the stand. Failure to do so may result in personal injury or property damage.

CAUTION

- To prevent injury never put your fingers into the tubes when handling tubular hardware.
- Never tighten the Wing Bolt for Height Adjustment without the Upper Tube installed. Doing so will damage the Pipe Joint.
- To prevent the instance of damage to the tubular hardware, use care not to overtighten the Wing Bolts.

Mounting the Bass Drum

Loosen the Adjustment Nut to fully open the Basket. Gently place the Bass Drum onto the Basket and position the Green Dots on the Basket Arms to the players' right side (Fig.3).

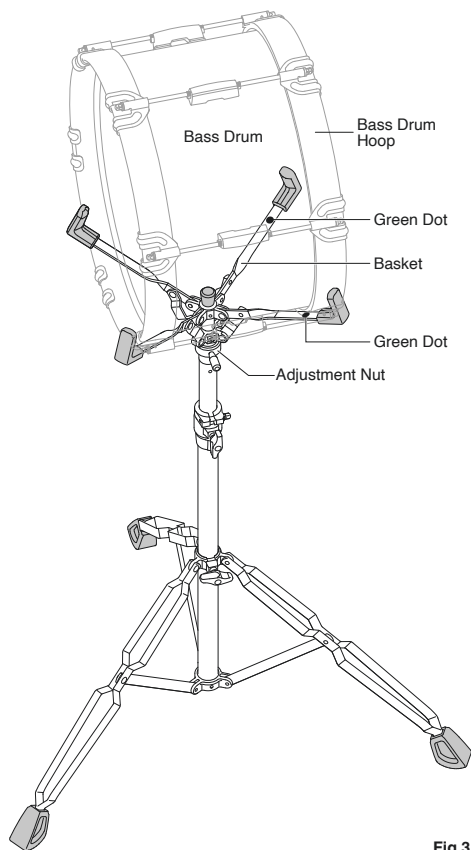


Fig.3

While supporting the Bass Drum with one hand, tighten the Adjustment Nut so that all four of the Basket Arms firmly grip the Bass Drum at the Hoops (Fig.4).

Important

- To mount the drum correctly and safely, all four basket arms must contact the bass drum hoops.

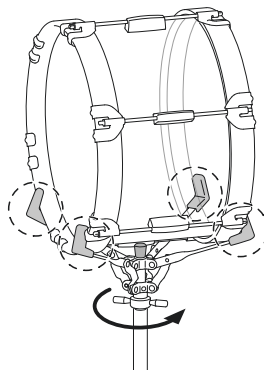


Fig.4

CAUTION

- Do not over-tighten the Adjustment Nut, doing so may damage the stand.
- When moving or transporting the stand, always remove the Bass Drum.
- Before use, always check that the drum is firmly mounted to the stand and that all Wing Bolts and Key Bolts are tight and secure. Failure to do so may result in personal injury or property damage.

Note

- The Basket Arms should be positioned to the outside of the Bass Drum Hoops.

CAUTION

- ◆ Remove the bass drum when making any stand height adjustments. Use one hand to support the stand to prevent it from falling, and use your other hand to loosen or tighten the Wing Bolts/ Key Bolts. Keep your fingers clear of folding parts to avoid pinching or bodily harm.
- ◆ When handling tubular hardware, never put your fingers into the tubes; doing so may cause bodily harm.
- ◆ Do not tighten the Wing/Key Bolts without pipes inserted into the respective collars; doing so will damage the stand.
Always use the stand on a flat-level surface and ensure it is stable before use. Failure to do so may result in personal property damage or bodily harm.
- ◆ Safety Supervision is highly recommended when using this product with younger musicians; failure to do so may result in personal injury and/or property damage.
- ◆ Pearl Musical Instrument Company and Affiliates cannot be held responsible for personal injuries or property damage caused by misuse, improper handling, failure to follow product warnings or instructions, or use of the product outside of its intended purpose.

California Proposition 65



Pearl[®]

<https://www.pearldrum.com>

Products and specifications are subject to change without notice.

Printed in China

~Jul. 2024~