


PEARL HI-HAT STAND

H-1000

Instruction Manual

Congratulations on your purchase!
To get optimum performance of your H-1000 Hi-Hat Stand,
please read this Instruction Manual before playing.

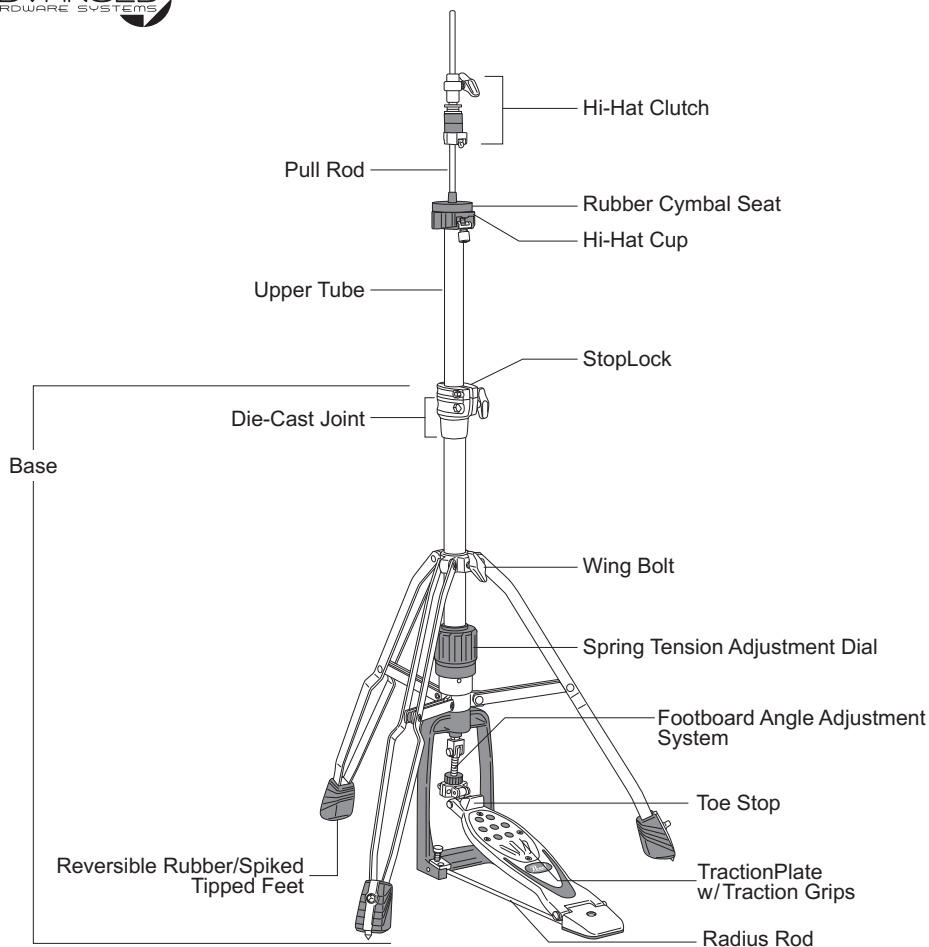

Footboard Attachment

Squeeze the Radius Rods together and insert the ends into the holes in the Support Casting as shown in the diagram. Stand the hi-hat base vertically by adjusting the width of the legs. Set the bottom of the Support Casting squarely on the floor to form a solid tripod (Fig. 1).

Note: Reverse the above procedure for disassembly.

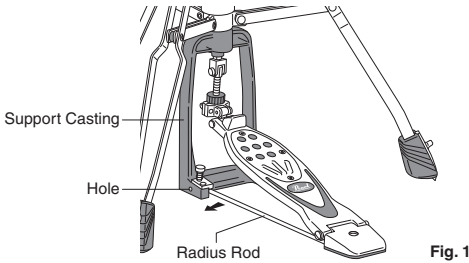


Fig. 1

Swivel Leg Adjustment

Loosen the Wing Bolt and swivel the legs to the desired position. Make sure that the tripod is stable and re-tighten the Wing Bolt (Fig. 2).

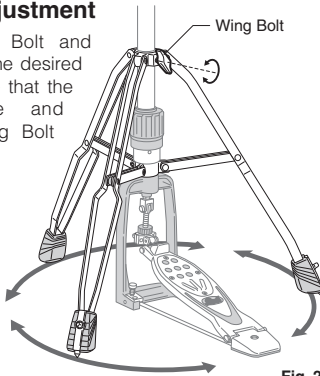


Fig. 2

CAUTION

Test the stability of the hi-hat before playing. Readjust the legs as necessary to achieve a stable tripod before proceeding.

Reversible Spiked / Rubber Tipped Feet

For maximum slip prevention, the Spike Tip should be used. Loosen the Key Bolt until the Spike is easily turned then rotate the Spike downward to lock the Spike (Fig. 3).

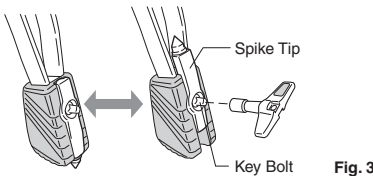


Fig. 3

CAUTION

The Spikes are sharp and can cause bodily injury or property damage. To prevent mishaps, use extreme care when handling the hi-hat especially when the Spike Tips are exposed. Rugs or carpets should be used to protect floor surfaces.

Upper Section Assembly

Thread the Upper Pull Rod into the connector of the Lower Pull Rod as shown in (Fig.4-A) and tighten securely. Insert the Upper Tube into the Die Cast Joint and set the height to your preference. Set the Stop Lock by loosening the Key Bolt and sliding the Stop Lock against the Die Cast Joint with the tab fitted into the slot then retighten the Key Bolt. Place the lower hi-hat cymbal on the Hi-hat Cup then attach the top hi-hat cymbal to the Hi-hat Clutch in the order shown in (Fig.4-B).

Tighten the Key Bolt to lock the Bottom Nut as shown in (Fig.4-C). Mount the Clutch with the top cymbal attached to the Upper Pull Rod as shown in (Fig.4-B). Adjust the distance between the top and bottom cymbals to your preference then secure the Clutch by tightening the Wing Bolt. When disassembling the hi-hat, it may be necessary to grasp the knurled surface of the Connector while unthreading the Upper Pull Rod.

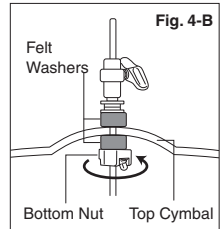


Fig. 4-B

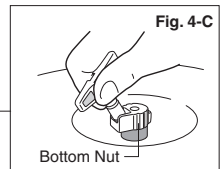


Fig. 4-C

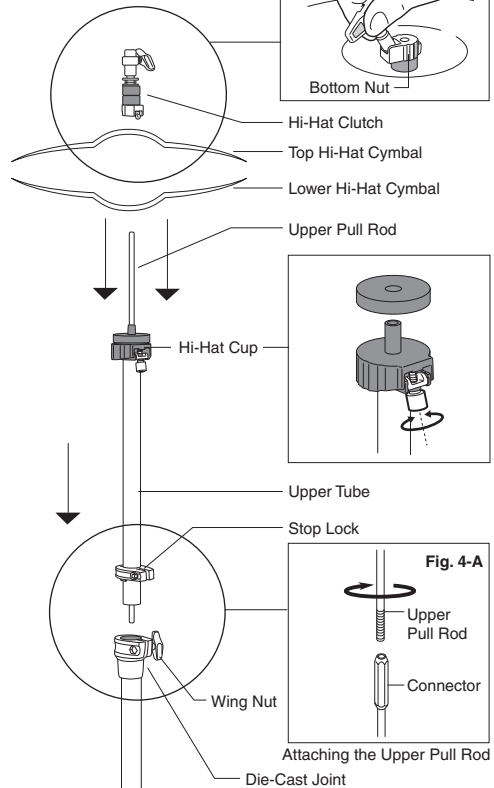


Fig. 4-A

Attaching the Upper Pull Rod

Die-Cast Joint

Hi-hat Cup Tilt Adjustment

Turn the Knurled Knob to tilt the bottom cymbal to help prevent "air lock" between the cymbals (Fig. 5).

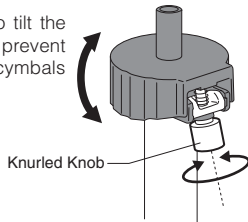


Fig. 5

Spring Tension Adjustment

The spring tension can be adjusted quickly and precisely by turning the Spring Tension Dial. This innovative system features extended tension range and click-stops for slip-proof performance under the most demanding playing conditions (Fig. 6).

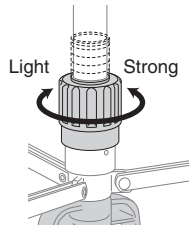


Fig. 6

Footboard Angle Adjustment

To change the footboard angle, loosen the Key Bolt and turn the Adjustment Ring. When the desired angle is achieved, re-tighten the Key Bolt to retain this setting (Fig. 7).

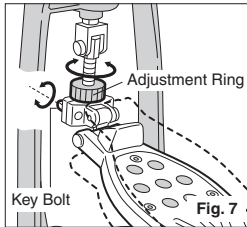


Fig. 7

CAUTION

When changing the footboard angle, make sure that the Upper and Lower Pivots are parallel as shown in (Fig. 8) for optimum performance.

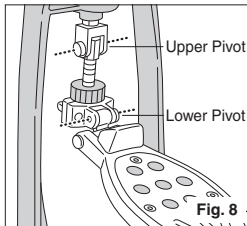


Fig. 8

TractionPlate / Traction Grips

The Traction Plate is reversible to provide just the right amount of grip at either the front or rear of the footboard. The Traction Grip dots can be removed as needed to custom tailor the amount of traction for your personal playing style. For either adjustment, remove the four Allen screws holding the Traction Plate with the included Allen Wrench (Fig. 9-A). The Traction Plate can then be reversed (Fig. 9-B), the Traction Grip dots removed and rearranged, or both. Note: When reattaching the Traction Plate, finger-tighten the four screws to prevent cross-threading then tighten the screws securely.

Fig. 9-A

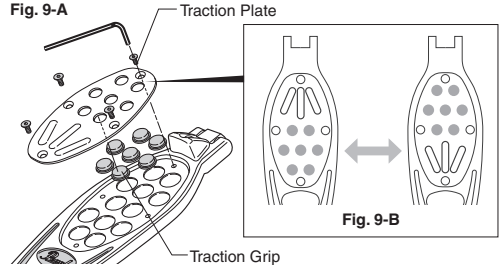


Fig. 9-B

CAUTION

- 1) To prevent damage to the footboard, periodically inspect the screws on the TractionPlate to ensure that they are tight and evenly tensioned. An Allen wrench is provided for this purpose.
- 2) Always use the pedal with the Traction Plate mounted to prevent possible injury to your foot.

Maintenance

The Base Tube is secured to the Support Casting with an Allen screw. In the event the Base Tube becomes loose, tighten the Allen screw with the provided Allen wrench to restore stability (Fig. 10).

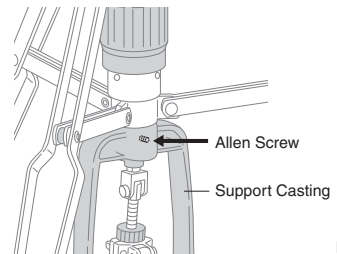


Fig. 10

Periodically lightly lube external moving parts such as the Wing Nuts, Wing Bolts, Key Bolts, and Footboard Hinge to achieve optimum performance from your hi-hat.

Caution

- ◆ Periodically check all Allen Screws for tightness and tighten them with the provided Allen Wrenches as needed.
- ◆ Periodically lightly lube external moving parts such as the Chain, Wing Nuts, Wing Bolts, Key Bolts, and Footboard Hinge to achieve optimum performance from your hi-hat.
- ◆ To maximize traction of the rubber mat beneath the heel plate, keep it clean and dust free using a damp cotton towel.

Pearl[®]

<http://www.pearldrums.com>

Products and specifications are subject to change without notice.

Printed in China